



Make Every Moment Count!®

GETTING STARTED WITH YOUR TIME TIMER® MAX


Congratulations on the purchase of your new Time Timer® MAX. We hope that it helps you make every moment count!



1

INSTALL 2 C BATTERIES

The battery compartment is located on the back of the Time Timer® MAX. Simply lift battery cover open from right side to insert batteries into compartment. Close battery compartment by pressing closed until you hear a "click".

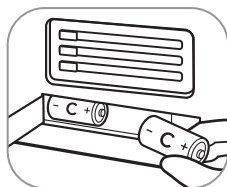

2

CHOOSE FACE AND TIME DURATION

Insert your finger through the hole on the back of MAX and push out all three two-sided timer faces. Place the selected timer face (or dry erase face) on the top and then snap them back in place, one face at a time. Turn the time duration dial on the back of the MAX *to match* the total length of time represented on the selected timer face or written on dry erase face.



3

CHOOSE YOUR SOUND PREFERENCE

Using the red switch on the back of the MAX, choose your desired volume setting: no alert, low, or high



4

SET YOUR TIMER

Use the center knob to turn the red disk counter-clockwise until you reach your chosen amount of time. Immediately, your new timer will begin to countdown, and a quick glance will reveal the time left thanks to the brightly colored disk and large, easy-to-read numbers.



Create time blocks on any face by snapping set markers in the grooves between the red disk and numbers.

HOW TO DISPLAY

There are 4 display options for the Time Timer® MAX:

- With its built in kickstand
- Flip the kickstand to hang from a whiteboard hook or map rail
- Use the included bracket wall mount
- Hang from a screw in the wall

BATTERY RECOMMENDATIONS

We recommend using high-quality, name-brand alkaline batteries to ensure accurate timing. You may use rechargeable batteries with Time Timer, but they may deplete more quickly than traditional batteries. If you do not plan to use your Time Timer for an extended period of time (several weeks or more), please remove the battery to avoid corrosion.



scan for additional battery information

PRODUCT CARE

Our timers are manufactured to be as durable as possible, but like many clocks and timers, they have a quartz crystal inside. This mechanism makes our products quiet, accurate and easy to use, but it also makes them sensitive to being dropped or thrown. Please use with care.