




Make Every Moment Count!®

GETTING STARTED WITH YOUR TIME TIMER® WASH

Congratulations on the purchase of your new Time Timer® WASH visual handwashing timer. We hope that it helps you make every moment count!

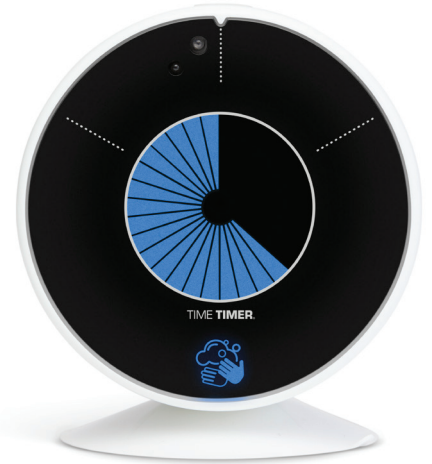

1

INSTALL 3 AA BATTERIES

The battery compartment is located behind the back cover of the timer. First, remove the back cover by twisting. Next, open the battery compartment and insert 3 AA/1.5 V batteries. Replace the back cover by locking it back into place.



2

CHOOSE YOUR SOUND PREFERENCE

Press the top button to rotate between silent operation, beep at transitions, or beep and music played.



3

START YOUR TIMER

Start the timer by holding or slowly waving your hand in front of the sensor until the blue lights come on. There is no need to touch the timer to start it.

To stop timer mid-cycle, hold hand in front of sensor for 3 seconds.



OPTIONS FOR DISPLAYING YOUR TIME TIMER WASH

1. Set the WASH on a level surface
2. Hang on a wall with a nail or screw (not included)
3. Insert the included suction cup into the back of the WASH cover to attach the unit to a mirror, window, or glass panel



4. Insert the included suction cup into the bottom of the timer to attach to a smooth counter top. Remove back cover, slide suction cup into divot on bottom. Replace the back cover.

ABOUT THE WASH SUCTION CUP

The Time Timer® WASH Suction cup adheres best to smooth tile, marble, glass, or mirrors. Surfaces should be free of any dirt or soap. For best results:

1. Clean surface
2. Warm suction cup with warm water and dry
3. Press the cup firmly into surface, ensure no air bubbles.
4. Set for 24 hours before adding the timer.

TIP: For best results, apply when warmer than 40° F/5° C and on a room temperature surface. Periodically press down to remove any possible air pockets that may have developed over time.



scan for additional battery information

QUESTIONS? WE'RE HERE TO HELP: SUPPORT@TIMETIMER.COM