



Make Every Moment Count!®

GETTING STARTED WITH YOUR TIME TIMER® WASH + SOAP

Congratulations on the purchase of your new Time Timer® WASH + Soap visual handwashing timer. We hope that it helps you make every moment count!



1

CHARGE DISPENSER

To charge the dispenser, plug the provided mini-USB cable into the right-hand side of the unit. Plug the USB side of the cable into a USB fitted wall outlet or charging block.



Solid green light appears above the charging port to represent full charge. If green light is flashing, the unit is still charging. It will take about three hours for the WASH + Soap Dispenser to reach a full charge. The Low Battery Indicator will display on the face.



Note: Dispenser does not need to remain plugged in for operation, but will continue to operate when plugged in.

TIPS

- Clean spout regularly to prevent clogs.
- If spout becomes clogged, run pump with warm water solution.
- If sensor is not reading, turn pump off, then wipe the sensor area to remove any build up.
- Do not submerge pump in water or use in shower.

2

FILL PUMP

Fill dispenser with soap by removing cap on the back of unit and filling with regular liquid hand-washing soap. It is not recommended to use Hand Sanitizer, Foaming Soap or Exfoliating Soaps with the Time Timer WASH + Soap Dispenser.



3

TURN ON/OFF


Turn unit on and off by pushing the power button on the back of the unit. You will hear a “ker-plunk!” sound to indicate that the unit has been turned on or off.



4

ADJUST SOUND

Choose your preferred sound setting by pushing the sound button located under the Power button on the back of the unit. Continue to press to cycle through the three sound options: Beep Only, Beep & Music, or Silent.

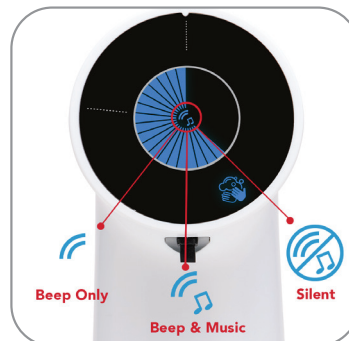

5

WASH HANDS

Simply hold your hand under the soap dispensing spout as shown below, and the soap will automatically release into hand. Timer initiates automatically once soap is dispensed.

The amount of soap that is dispensed will depend on the thickness of the soap contained in the soap basin. If more soap is desired as you are washing hands, place hand under spout again. The timer will continue through the cycle.



QUESTIONS? WE'RE HERE TO HELP: SUPPORT@TIMETIMER.COM