



Make Every Moment Count!®

GETTING STARTED WITH YOUR TIME TIMER® TWIST

2024 & BEYOND EDITIONS


Congratulations on the purchase of your new TWIST with Kickstand. We hope that it helps you make every moment count!



1

INSTALL ONE AAA BATTERY

The battery cover is located on the back of your TWIST. Simply pull down from the top of the battery compartment to insert battery. Replace battery cover by aligning tabs on bottom edge and gently pushing until you hear a "click".

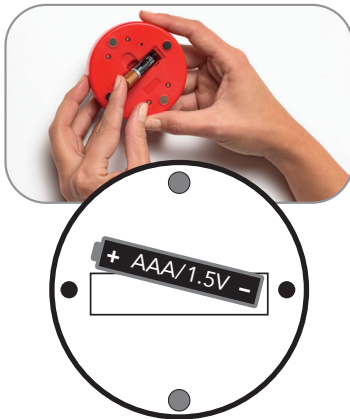

2

SET YOUR TIMER

Gently turn the outer ring counterclockwise to set your desired time. When you turn counterclockwise, the TWIST will first display the time from 0 - 60 seconds and then 1 minute up to 90 minutes. Once set, the entire disk will represent the duration you chose.



3

START OR PAUSE YOUR TIMER

Press the Play/Pause button to start your timer. When the time is complete, TWIST has a continuous alert and will beep and flash a visual alarm until the Play/Pause button is pressed again, or for one minute.



SLEEP MODE

If the TWIST is set to 00:00 and left untouched for more than 3 minutes, the unit will go into sleep mode to preserve battery.

BATTERY RECOMMENDATIONS

We recommend using high-quality, name-brand alkaline batteries to ensure accurate timing. You may use rechargeable batteries with Time Timer, but they may deplete more quickly than traditional batteries. If you do not plan to use your Time Timer for an extended period of time (several weeks or more), please remove the battery to avoid corrosion.



scan for additional battery information

PRODUCT CARE

Our timers are manufactured to be as durable as possible. A magnetic back makes the TWIST® a snap to display. Easily attach it to metallic surfaces from refrigerators and file cabinets to the whiteboard in your classroom, kitchen, or home. Please use with care, as internal components are sensitive to being dropped or thrown.

QUESTIONS? WE'RE HERE TO HELP: SUPPORT@TIMETIMER.COM