



Make Every Moment Count!®



GETTING STARTED WITH YOUR TIME TIMER® ELEMENT

Congratulations on the purchase of your new Time Timer® Element, a customizable digital water resistant visual timer. We hope that it helps you make every moment count!



For premium access to the Time Timer® App, scan the QR code on the package insert with your product and follow prompts.

1

CHARGE BATTERY

The Element has a rechargeable lithium-ion battery. Please charge fully before first use.

Note: The battery icon on the front of product will turn ON when charge is below 30%. Product should be charged when low battery indicator light comes on. Battery icon flashes when product is charging and turns OFF when timer is fully charged.



Open charging port by gently pulling up on left side of charging port cover



Using provided charging cable, plug the USB-C port into the product and the USB-A port into a charging block or power source



When charging is complete, remove charging cable and secure rubber closure to ensure waterproofing

Note: The charging port cover should be sealed in place prior to use. Failure to properly close and secure charging port cover could lead to product malfunction.

2

CHOOSE DISPLAY METHOD

The Element can sit on a flat surface, or hang using the provided removable cord and suction cup.



Flat Surface:
Gently rotate the arms so your Time Timer® Element rests on them at desired viewing angle.



Hanging:
Gently feed one end of the removable cord through the hole at the end of the arm and secure by ensuring the tab is fully through the hole and extended to the outside of the arm. Repeat with the other end of the cord on the opposite arm.



Simply hang your Time Timer® Element from desired location, or hang from the provided suction cup that has been secured to a flat, vertical surface.

3

SETTING YOUR TIMER



Power ON/OFF:
To power timer on or off, press the power button on the back of the timer.
The timer will automatically go to sleep if inactive for 3 minutes when the timer reads 00:00, or if paused on any duration after 1 hour.



Adjusting Time:
You can adjust the timer to any duration of your choice from 00:01 – 99:59.
All timers must be stopped to set the timer duration.



1x Press the **-** or **+** button 1x to decrease or increase time by 1 second up to 1 minute, then by 10 seconds.



Press and hold the **-** or **+** button to decrease or increase time by 10 seconds up to 1 minute, then by 1 minute.



Once desired time is reached, simply press play/pause to start your timer.

4

SETTING A PRESET TIMER

The three buttons on top are preset durations:



2-minutes



8-minutes



25-minutes

You can program any preset button to any duration of your choice from 00:01 – 99:59



Press desired preset button, that preset letter will display on screen. Set timer to desired duration. Press and hold that preset button until the time flashes. This preset is now set to your desired time.

5

SET AUDIBLE ALERT VOLUME

There are three audible alert options:



Volume Off



Low Volume



High Volume



Press the alert volume button on the back of the product to display the audible alert option of your choice. The selected audible alert option will display on the front of the screen in the lower left circle for 10 seconds.

6

STARTING YOUR TIMER

Select the preset of your choice, or adjust the time to your desired time.



Press the Play/Pause button and timer will immediately display full blue disk with desired time and begin counting down.

Final Alert



When the time has elapsed, a flashing alert will appear on the screen. If the audible alert is on low or high volume, there will also be an audible alert. If the audible alert is off, there will be no audible final alert.